



How to Replace Keys on a Keyboard

Learn how to replace the keys on your wired, mechanical keyboard.

Written By: Cooper



INTRODUCTION

Do you have a keyboard with keys that do not work? Use this guide to replace your keys and return your keyboard to proper working condition.



TOOLS:

- [Tweezers](#) (1)
- [Spudger](#) (1)
- [Compressed Air](#) (1)



PARTS:

- [Replacement Keyboard Keys](#) (1)
-

Step 1 — Individual Keys



- Loosen the key by prying all four corners gently with your spudger.


⚠ Make sure your keyboard is unplugged before performing any of these steps.

Step 2




- Wedge the tip of the spudger under the bottom of the key and carefully lift up until the key pops loose.

ⓘ If the key will not come out, or seems like too much force is needed, try step one again.

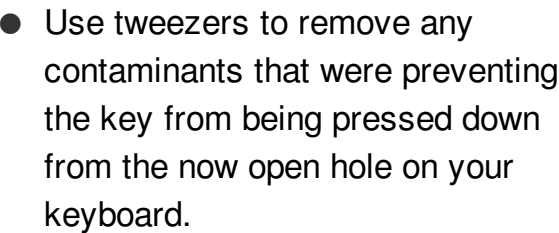

Step 4

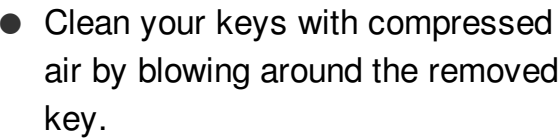

Step 5



- Push in the clean keys until you hear a popping sound.
- The keys should click in easily, so if you are having trouble try realigning the key with its hole.
- ❗ If you removed multiple keys, make sure they are in their proper spot and orientation.

Congratulations! You now have a keyboard with fully functional keys!

This document was last generated on 2017-07-06 07:13:16 AM.